



1

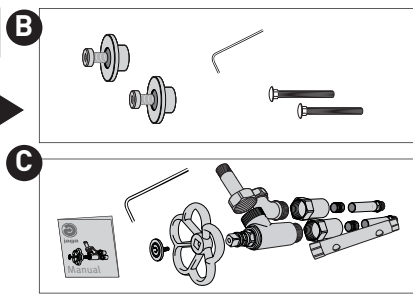



B

C



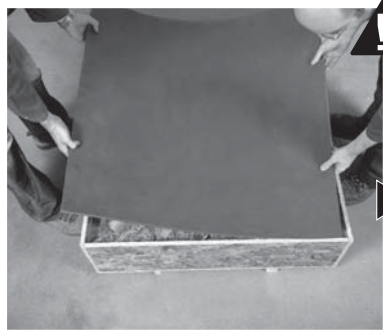


!


Gebruik het schuimrubber als bescherming op de vloer tijdens de montage van de Heatwave.
Utilisez la mousse de caoutchouc comme protection sur le sol pendant le montage du Heatwave.
Benutzen Sie den Schaumgummi als Fußbodenschutz, wenn Sie den Heatwave montieren.
A foam rubber mat is supplied for protection of the Heatwave during assembly. Please place this on the floor and assemble the radiator on it before mounting.

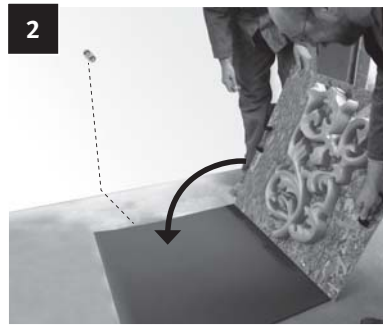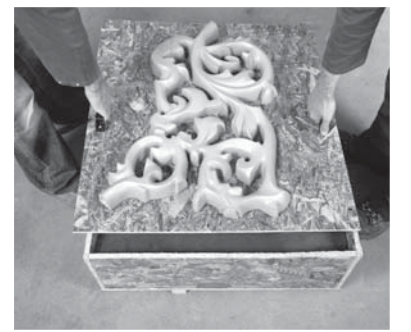


2

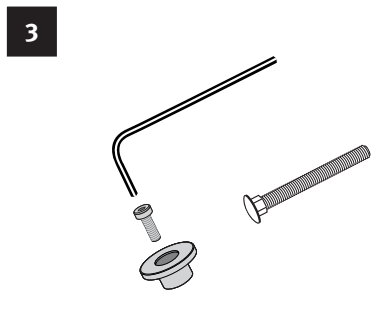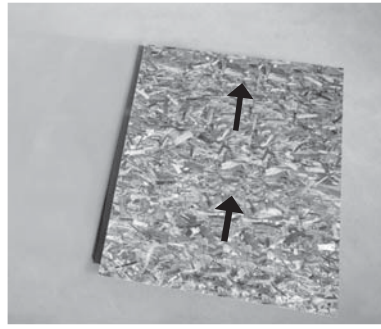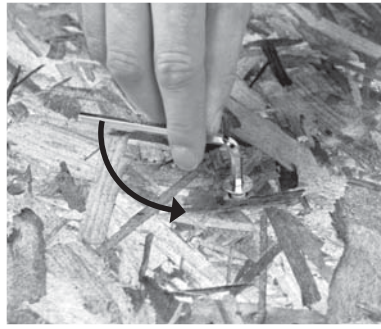


3

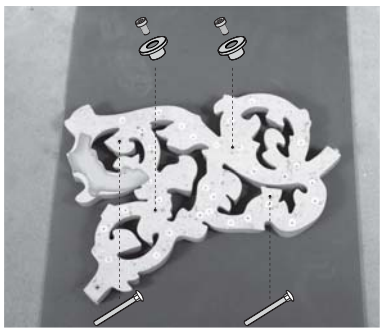


3a

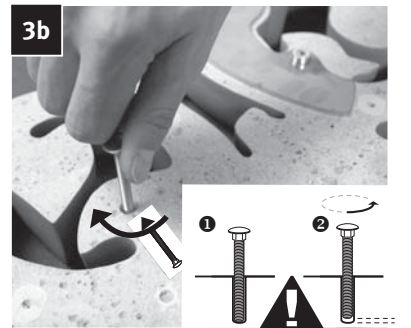

3b


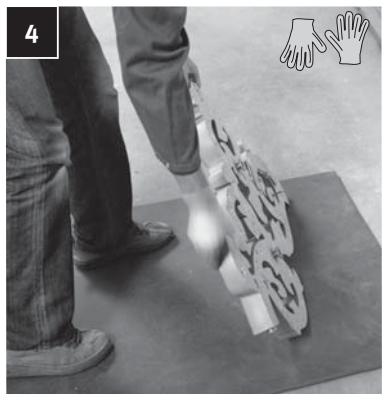


4

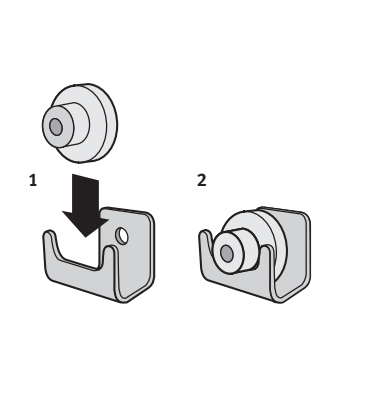

1

2

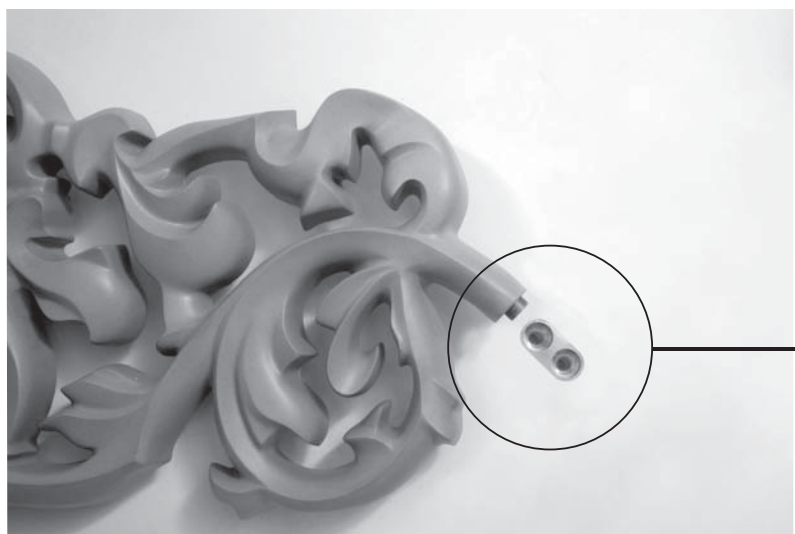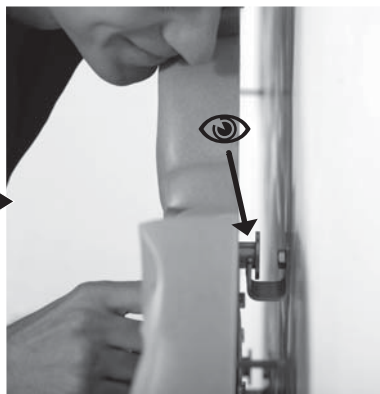

aansluiting - raccordement
Anschluß - connection

C

